


8316 & 8716

Assembly Instructions

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 1. Be sure the power to the installation point is OFF.
2. Locate the CROSSBAR and secure to OUTLET BOX with (2) OUTLET BOX SCREWS. Locate LOCK NUT A and SHAKE PROOF WASHER A. Thread LOCK NUT A and SHAKE PROOF WASHER A onto top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate LOCK NUT B and thread onto bottom end of NIPPLE. Tighten LOCK NUT A against CROSSBAR with pliers until snug.
3. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Unravel FIXTURE SUPPLY and GROUND and pass through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3) CANOPY CHAIN LOOP 4) SHAKE PROOF WASHER B.
4. Make the connections. Position the fixture under the OUTLET BOX and pass the FIXTURE SUPPLY and GROUND WIRES through the center of the NIPPLE. Connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE. Secure both to the CROSSBAR with GREEN GROUND SCREW. Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (RIBBED or WHITE side); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY (SMOOTH or BLACK side). Wrap all connections with approved electrical tape.
5. With the connections properly made, carefully tuck all wires into OUTLET BOX. Locate the CANOPY CHAIN LOOP and thread onto the end of NIPPLE. Proceed to thread LOCK NUT B and SHAKE PROOF WASHER B down NIPPLE and tighten against CANOPY CHAIN LOOP. Attach top end of FIXTURE CHAIN to CANOPY CHAIN LOOP. Pass the center hole in the CEILING CANOPY over the CANOPY CHAIN LOOP and secure to ceiling by threading LOCK RING onto CANOPY CHAIN LOOP.
6. Install bulb(s) referring to fixture markings and or labels for maximum wattage. Install fixture shades (if required) based on style purchased. Restore power to installation point ON. Retain this sheet for future reference.

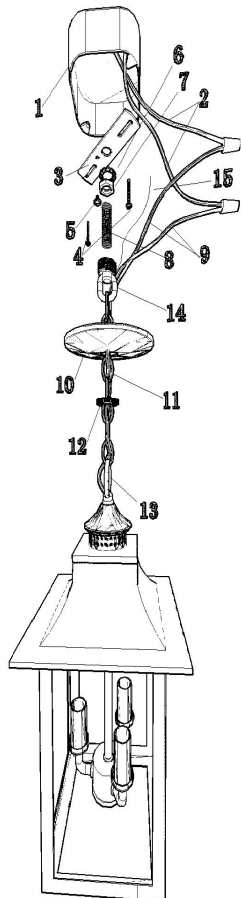

1. Outlet box
2. House supply and ground wires
3. Crossbar
4. Outlet box screws
5. Green ground screws
6. Shake proof washer A
7. Lock nut A
8. Nipple
9. Fixture supply
10. Ceiling canopy
11. Fixture chain
12. Lock ring
13. Fixture loop
14. Canopy chain loop
15. Ground wires