



1500 Cherokee Parkway, Suite 100, Acworth, GA 30102
P: 866-845-5451 • F: 866-816-6165
E: service@acclaim-lighting.com • www.service@acclaim-lighting.com

by Acclaim Lighting

BP6008 & BP6009 & BP6028 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Secure the mounting bar(9) to the outlet box(1) with box screws(6)
2. Pull the outlet wire and ground wire from the outlet box. Make wire connections with wire connector(2)
 - Black wire from light to Black wire (3) from power source.
 - White wire from light to White wire(4) from power source.
 - Loop the ground wire(5) to mounting bar(9) with a ground screw(10).
3. Attach the canopy(11) against the outlet box(1). Secure with the ball nut(12) and mounting screw(7).
4. Loosen the ball nut(13) and insert the bulb (15) into socket(14).
5. Put the bulb into the shade(16) and tighten the ball nut (13).

DO NOT USE BARE HANDS TO TOUCH THE BULB.

INSTALLATION IS NOW COMPLETE

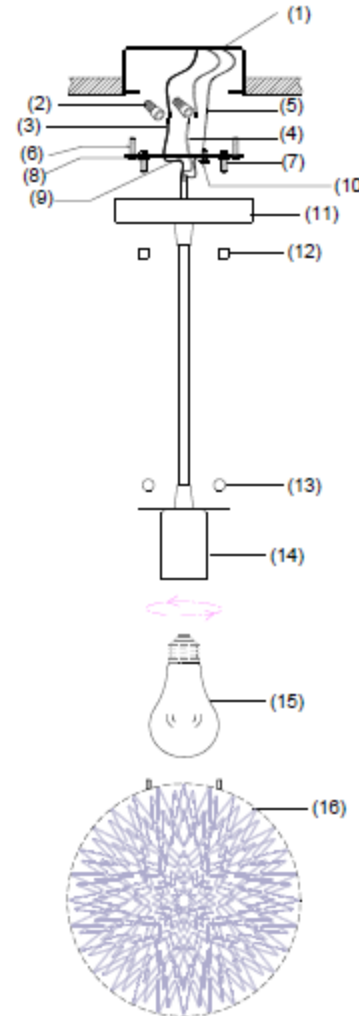

1. OUTLET BOX
2. WIRE CONNECTOR
3. BLACK WIRE
4. WHITE WIRE
5. GROUND WIRE
6. BOX SCREW
7. MOUNTING SCREW
8. HEX NUT
9. MOUNTING BAR
10. GROUND SCREW
11. CANOPY
12. BALL NUT
13. BALL NUT
14. SOCKET
15. BULB
16. ALUMINUM SHADE